



This document lists the compatible batteries with all GoodWe storage inverters, consisting in 3 system types:

- 1) Low-voltage energy storage systems
- 2) High-voltage energy storage systems
- 3) Commercial and industrial energy storage systems

Only batteries listed in this document are approved for connection to GoodWe storage inverters according to GoodWe Limited Warranty.

## 1) Low-voltage Energy Storage Systems

Battery	Battery Battery		Inverter Series								
Brand	Series	Model	ES	EM	SBP	ES G2	SBP G2	ES Uniq			
	SECU-A	SECU-A5.4L	•	•	•	•	•				
COODWE	Lynx Home U <sup>*1</sup>	LX U5.4-L	•	•	•	•	•	•			
GOODWE	Lynx Home U-20*2	LX U5.4-20	•	•	•	•	•	•			
	Lynx Home A*3	LX A5.0-10				•	•	•			

- \*1. ARM firmware versions 11 and above are required for compatibility.
  \*2. ARM firmware versions 11 and above are required for compatibility.

## ES G2/SBP G2:

- \*2. ARM firmware versions 02 and above are required for compatibility.
  \*3. ARM firmware versions 07 and above are required for compatibility.

<b>Battery Brand</b>	Battery Series	Battery Model	ES	EM	SBP	ES G2	SBP G2	ES Uniq
	Battery-Box Pro Series*1	-	•	•	•	•	•	
	Battery-Box Res Series*1	-	•	•	•	•	•	
BYD	Battery-Box LV Series*2	-	•	•	•	•	•	
	Battery-Box Premium LVL*2	LVL 15.4	•	•	•	•	•	
	Battery-Box Premium LVS Series*2	-	•	•	•	•	•	

### ES/EM/SBP/BP:

- \*1. ARM firmware versions 00 and above are required for compatibility.
  \*2. ARM firmware versions 07 and above are required for compatibility.

Battery Brand	Battery Series	<b>Battery Model</b>	ES	EM	SBP	ES G2	SBP G2	ES Uniq
		RESU 3.3*1	•	•		•	•	
		RESU 6.5*1	•	•	•	•	•	
LG	RESU LV Series	RESU 10*1	•	•	•	•	•	ES Uniq
	RESULV Selles	RESU 12*2	•	•	•	•	•	
		RESU 13*2	•	•	•	•	•	
		RESU 6.4 EX <sup>*1</sup>	•	•	•	•	•	
EO/EN/ODD								

### ES/EM/SBP:

- \*1. ARM firmware versions 00 and above are required for compatibility.
  \*2. ARM firmware versions 07 and above are required for compatibility.

<b>Battery Brand</b>	Battery Series	Battery Model	ES	EM	SBP	ES G2	SBP G2	ES Uniq
	US2000 Series*1	US2000	•	•	•	•	•	
	US3000 Series*2	US3000	•	•	•	•	•	
	US2000C Series*1	US2000C	•	•	•	•	•	
PYLON	US3000C Series*2	US3000C	•	•	•	•	•	
	Force L1 Series*2	Force-L1	•	•	•	•	•	
	Force L2 Series*2	Force-L2	•	•	•	•	•	
	US5000 Series*3	US5000				•	•	

- \*1. ARM firmware versions 00 and above are required for compatibility.
- 2. ARM firmware versions 07 and above are required for compatibility.
  3 ARM firmware versions 00 and above are required for compatibility.

3. ARIVI III III Wale V	ersions of and above are required for comp	Datibility.						
<b>Battery Brand</b>	Battery Series	Battery Model	ES	EM	SBP	ES G2	SBP G2	ES Uniq
	DYNESS-LV Series <sup>™</sup>	DYNESS-LV x1	•	•	•			
		DYNESS-LV x2	•	•	•			
	DTNESS-LV Selles	DYNESS-LV x3	•	•	•			
		DYNESS-LV x4	•	•	•		SBP G2 ES Uniq	
	POWERBOX F Series <sup>*1</sup>	POWERBOX F-2.5	•	•	•			
DYNESS		POWERBOX F-5.0	•	•	•			
	FOWERBOX 1 Selles	POWERBOX F-7.5	•	•	•			
		POWERBOX F-10.0	•	•	•			
ı		DL5.0C*2				•	•	•
	DYNESS-LV Series	DL5.0X*3				•	•	
		Λ 4 O 1 O O *4						

## ES/EM/SBP/BP:

- ARM firmware versions 07 and above are required for compatibility.
- ES G2/SBP G2:
- \*2. ARM firmware versions 06 and above are required for compatibility.

  \*3. ARM firmware versions 07 and above are required for compatibility.

  \*4. ARM firmware versions 07 and above are required for compatibility.



# 1) Low-voltage Energy Storage Systems

Battery	Battery	Battery		Inverter Series	
Brand	Series	Model	ES	EM	SBP
	LBS051100A Series <sup>*1</sup>	LBS051100A-A02	•		
OLOID	LBS051100A Series	LBS051100A-A03	•		
OLOID	LBS051200A Series <sup>*1</sup>	LBS051200A-A02	•		
	LD3031200A Series	LBS051200A-A03	•		

ES:
\*1. ARM firmware versions 12 and above are required for compatibility.

Battery Brand	<b>Battery Series</b>	Battery Model	ES	EM	SBP
		Soluna 4K Pack	•	•	•
Soluna	LV(48V) Battery Series	Soluna 5K Pack	•	•	•
		Soluna EOS 5K Pack	•	•	•
Battery Brand	Battery Series	Battery Model	ES	ЕМ	SBP
	Smile5-BAT Series	SMILE5-BAT*2	•	•	•
		Smile-BAT-10.1P <sup>*2</sup>	•	•	•
ALPHA <sup>*1</sup>	Smile-BAT Series	Smile-BAT-10.3P*2	•	•	•
ALPHA		Smile-BAT-13.3P*3	•	•	•
	M48112-P Series	M48112-P*3	•	•	•
	M48100-P Series	M48100-P*3	•	•	•

## ES/EM/SBP/BP:

- \*1. CAN communication line sequence of ALPHA-ESS battery does not match GoodWe inverters. A matching solution provided by ALPHA-ESS is required.
- \*2. ARM firmware versions 10 and above are required for compatibility.
  \*3. ARM firmware versions 11 and above are required for compatibility.

Battery Brand	Battery Series	Battery Model	ES	EM	SBP
		Firefly-3.6K	•	•	•
		Firefly-7.2K	•	•	•
		Firefly-10.8K	•	•	•
Tecloman	Firefly Series*1	Firefly-14.4K	•	•	•
		Firefly-18.0K	•	•	•
		Firefly-21.6K	•	•	•
		Firefly-25.2K	•	•	•
ES/EM/SBP:		1			1

\*1. ARM firmware versions 12 and above are required for compatibility.

Battery Brand	Battery Series	Battery Model	ES	EM	SBP
UZENERGY	L051100-A Series	L051100-A <sup>*1</sup>	•	•	•

\*1. ARM firmware versions 12 and above are required for compatibility.



## 2) High-voltage Energy Storage Systems

Battery	Battery	Battery	Inverter Series							
Brand	Series	Model	ET (5-10kW)*	ΕH	вт	вн	EHB	ET (15-30kW)	ET G2	ET (40~50KW)
		LX F6.6-H	•	•	•	•	•	•	•	
	Lynx Home F <sup>*1</sup>	LX F9.8-H	•	•	•	•	•	•	•	
	Lynx Home F PLUS+*2	LX F13.1-H	•	•	•	•	•	•	•	
		LX F16.4-H	•		•			•	•	
		LX F6.4-H-20		•		•				
		LX F9.6-H-20	•	•	•	•	•		•	
		LX F12.8-H-20	•	•	•	•	•	•	•	
	Lynx Home F G2*3	LX F16.0-H-20	•	•	•	•	•	•	•	
	Lynx Home 1 G2	LX F19.2-H-20	•	•	•	•	•	•	•	
		LX F22.4-H-20	•		•			•	•	
GOODWE		LX F25.6-H-20	•		•			•	•	
		LX F28.8-H-20						•	•	
		GW60KWH-D-10						•		
		GW100KWH-D-10								•
		GW100KWH-D-10 (Extension)								•
	Lynx C*4	LX C101-10								•
		LX C120-10								•
		LX C138-10								•
		LX C156-10								•
	Lynx Home D*5	LXD5.0-10	•		•			•	•	

\*. Including ET Series: ET PLUS+, ET PLUS+ (16A)

### ET/EH/BT/BH/EHB:

- \*1. ARM firmware versions 19 and above are required for compatibility.
- \*2. ARM firmware versions 23 and above are required for compatibility.
- \*3. For compatibility, the ET/BT series requires ARM25 and DSP09 versions and above; the EHB series requires ARM25 and DSP version 03 and above; the EH/BH series requires ARM25 and DSP version 07 and above.
- \*5. For compatibility, the ET/BT series requires ARM28 and DSP version 12 and above.

## ET (15-30KW)/ET G2:

- \*3. For compatibility, the ET (15~30K) Series requires ARM07 and DSP version 06 and above.

  \*4. For compatibility, the ET (15~30K) series requires ARM07 and above.

  \*4. ET 50KW with Lynx C-Series LX C101-10, LX C120-10 cannot reach the maximum power of the inverter.

  \*5. For compatibility, the ET(15~30K) series requires ARM 09 and DSP version 08 and above.

<b>Battery Brand</b>	Battery Series	Battery Model	ET (5-10kW)*	EH	вт	вн	ЕНВ	ET (15-30kW)	ET G2	ET (40~50KW)
	Battery-Box HV Series*1	-	•	•	•	•				
		HVM 8.3		•		•	•			
		HVM 11.0	•	•	•	•	•	•	•	
	Battery-Box Premium	HVM 13.8	•	•	•	•	•	•	•	
	HVM* <sup>2</sup>	HVM 16.6	•	•	•	•	•	•	•	
BYD		HVM 19.3	•	•	•	•	•	•	•	
		HVM 22.1	•	•	•	•	•	•	•	
		HVS 5.1	•	•	•	•	•	•	•	
E	Battery-Box Premium	HVS 7.7	•	•	•	•	•	•	•	
	HVS*2	HVS 10.2	•	•	•	•	•	•	•	
		HVS 12.8	•		•			•	•	

\*. Including ET Series: ET PLUS+, ET PLUS+ (16A)

## ET/EH/BT/BH/EHB:

\*1. ARM firmware versions 07 and above are required for compatibility.
\*2. ARM firmware versions 11 and above are required for compatibility.

ET15~30K:

\*2. ARM firmware versions 02 and above are required for compatibility.

BYD CAN communication line PIN1/2 corresponds to inverter CAN communication line PIN4/5.

\*2. The maximum charge/discharge current of single-cluster HVS battery is 25A, ET30K with single-cluster HVS battery will not be able to reach the nominal maximum charge/discharge power of the inverter ET15~30 series with HVM battery maximum charging and discharging current of 40A.



## 2) High-voltage Energy Storage Systems

Battery	Battery	Battery	Wechselrichterserie								
Brand	Series	Model	ET (5-10kW)*	EH	вт	вн	ЕНВ	ET G2	ET (40~50KW)		
		FLEX 8.6	•								
	RESU FLEX Series*1	FLEX 12.9	•								
LG		FLEX 17.2	•								
LG	RESU Type-R Series	RESU10H_Type-R					•				
	RESU Prime Series*2	RESU10H Prime					•				
	RESU PIIIIle Selles	RESU16H Prime					•				

<sup>\*.</sup> Including ET Series: ET PLUS+, ET PLUS+ (16A) ET/EH/BT/BH/EHB:

- \*1. Anly compatible with ET PLUS+ Series. ARM firmware versions 23 and above are required for compatibility.

  \*2. ARM firmware versions 20 and above and DSP versions 02 and above are required for compatibility.

Battery Brand	Battery Series	<b>Battery Model</b>	ET (5-10kW)*	EH	вт	вн	EHB	ET G2	ET (40~50KW)
PYLON	Powercube H1 Series*1	POWERCUBE-H1-48	•	•	•	•			
	Force H1 Series*2	Force-H1	•	•	•	•		•	
	Force H2 Series*3	Force-H2	•	•	•	•		•	
	Force H3 Series*4	Force-H3	•	•	•	•		•	

<sup>\*.</sup> Including ET Series: ET PLUS+, ET PLUS+ (16A)

### ET/EH/BT/BH:

- \*1. ARM firmware versions 07 and above are required for compatibility. Please note that the nominal voltage of POWERCUBE-H1-48 Series must be within the Battery Voltage Range of GoodWe inverters. Maximum 8 units for EH/BH, and 11 units for ET/BT.
- \*2. ARM firmware versions 14 and above are required for compatibility.
- \*2. When the 4-module FORCE-H1 is undervoltage, the battery voltage will be lower than 180V, so a minimum of 5 modules are required to match the ET.
- \*3. ARM firmware versions 14 and above are required for compatibility.
- \*3. When 2 modules of FORCE-H2 are undervoltage, the battery voltage will fall below 180V, so a minimum of 3 battery modules are required to match the ET.
- \*4. ARM firmware versions 14 and above are required for compatibility. Please note that the nominal voltage of Force H3 Series must be within the Battery Voltage Range of GoodWe inverters. Maximum 4 units for EH/BH, and 5 units for ET/BT.

\*4. Please note that the nominal voltage of Force H3 Series must be within the Battery Voltage Range of GoodWe inverters. Maximum 6 units for ET G2.

Battery Brand	<b>Battery Series</b>	Battery Model	ET (5-10kW)*	EH	ВТ	вн	EHB	ET G2	ET (40~50KW)
	Tower Series <sup>*1</sup>	Tower T7		•		•		•	
		Tower T10	•	•	•	•		•	
		Tower T14	•	•	•	•		•	
		Tower T17	•		•			•	
		Tower T21						•	
DYNESS	Tower Pro Series <sup>2</sup>	Tower Pro TP7						•	
		Tower Pro TP11	•		•			•	
		Tower Pro TP15	•		•			•	
		Tower Pro TP19	•		•			•	
		Tower Pro TP23						•	
	Power Rack-HV4F	Power Rack-HV4F-11s							•

<sup>\*.</sup> Including ET Series: ET PLUS+, ET PLUS+ (16A)

## ET/EH/BT/BH:

- \*1. ARM firmware versions 10 and above are required for compatibility.
- \*2. ARM firmware versions 10 and above are required for compatibility.

- \*1. ARM firmware versions 01 and above are required for compatibility.
- \*2. ARM firmware versions 01 and above are required for compatibility.



	_	_				1 0			
Battery	Battery	Battery	Inverter Series						
Brand	Series	Model	ET (5-10kW)*	EH	ВТ	ВН	ET G2	ET (40~50KW)	
Soluna	HV Battery Series <sup>*1</sup>	Soluna 7K Pack HV		•		•			
		Soluna 10K Pack HV	•	•	•	•			
		Soluna 15K Pack HV	•		•				
ET/EH/BT/BH/EH	ries: ET PLUS+, ET PLUS+ ( B: versions 10 and above are re	,							
Battery Brand	Battery Series	Battery Model	ET (5-10kW)*	EH	вт	ВН	ET G2	ET (40~50KW)	
	Mint-JKE <sup>*1</sup>	Mint-JKE5		•		•			
:DetioEdea		Mint-JKE10		•		•			
iPotisEdge		Mint-JKE15	•	•	•	•			
		Mint-JKE20	•	•	•	•			
ET/EH/BT/BH/EH	ries: ET PLUS+, ET PLUS+ ( <b>B:</b> versions 12 and above are re	,							
Battery Brand	Battery Series	Battery Model	ET (5-10kW)*	EH	вт	ВН	ET G2	ET (40~50KW)	
	WTS Power-CORE 1.0 <sup>'1</sup>	WTS Power-CORE 1.0-5.5							
		WTS Power-CORE 1.0-8.3	•		•				
		WTS Power-CORE 1.0-11.0	•		•				
		WTS Power-CORE 1.0-13.8	•		•				
(		<del>                                     </del>	1			+	i	<del>                                     </del>	

WTS

WTS Energy-CORE

# 3) Commercial and Industrial Energy Storage Systems

WTS Energy-CORE 1.0-9.6

WTS Energy-CORE 1.0-12.8 WTS Energy-CORE 1.0-16.0

WTS Energy-CORE 1.0-19.2 WTS Energy-CORE 1.0-22.4 WTS Energy-CORE 1.0-25.6

Battory Sories	Battory Model	Inverter Series				
Battery Series	Battery Would	ETC	BTC			
Lynx C series <sup>*1</sup>	LX C 101-10	•	•			
	LX C 120-10	•	•			
	LX C 138-10	•	•			
	LX C 156-10	•	•			
	Battery Series  Lynx C series  1	LX C 101-10  LX C 120-10  LX C 138-10	ETC			

<sup>\*1.</sup> ARM firmware versions 14 and above are required for compatibility.

ETC 50K/BTC 50K:
\*1: EMS firmware versions 02 and above are required for compatibility.
ETC 100K:

<sup>\*1.</sup> EMS firmware versions 00 and above are required for compatibility.